How to Install Your PIPOS Hardware
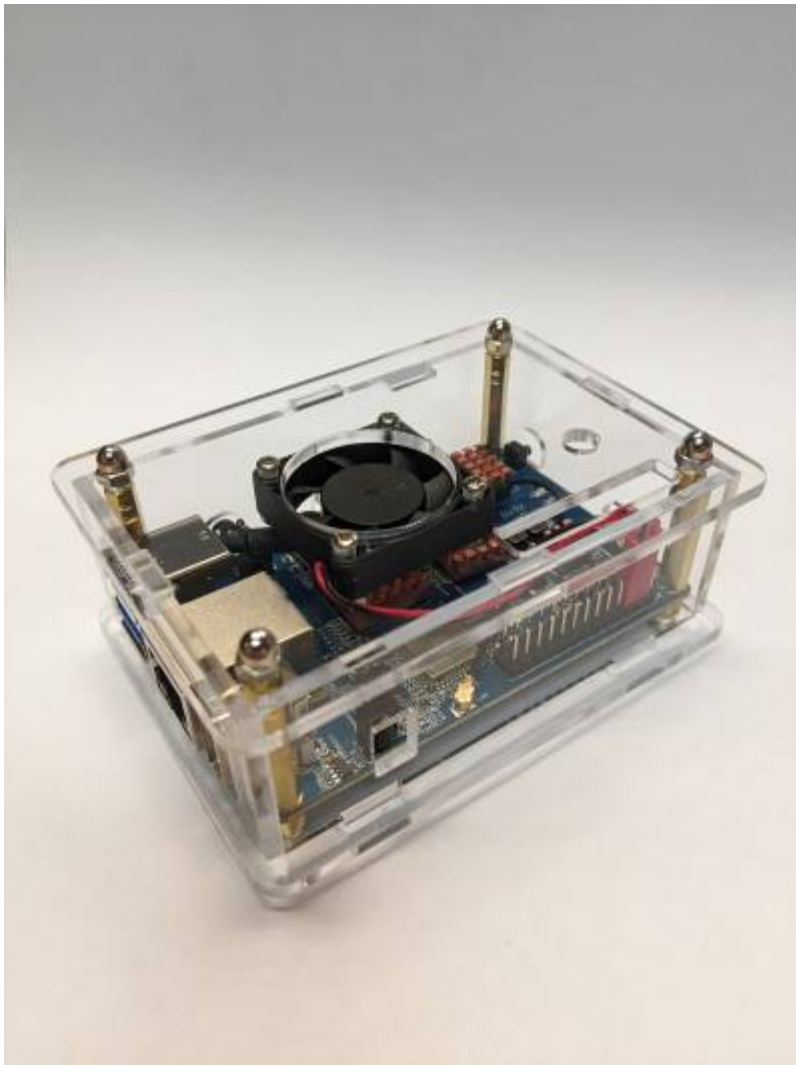
List of Hardware

May vary depending on what workstation was purchased.

1. PIPOS Unit
2. Power Supply
3. Ethernet Cable

*if you purchased a touchscreen monitor as well

1. HDMI Cable
2. Monitor
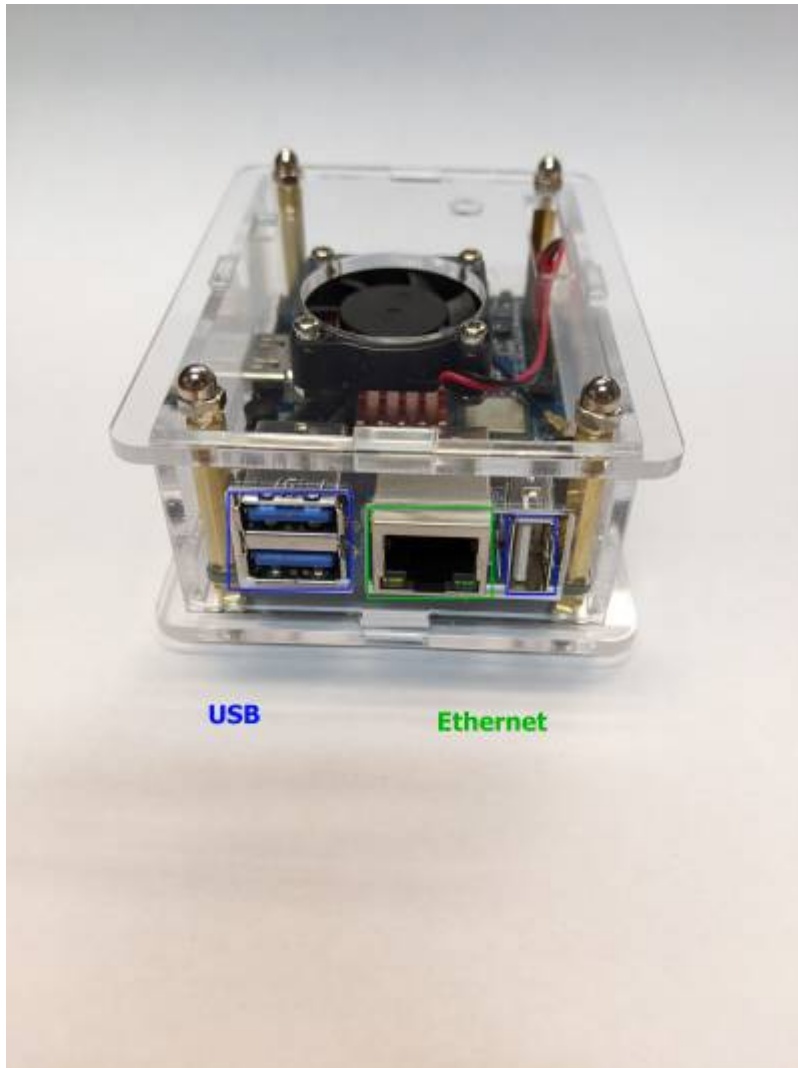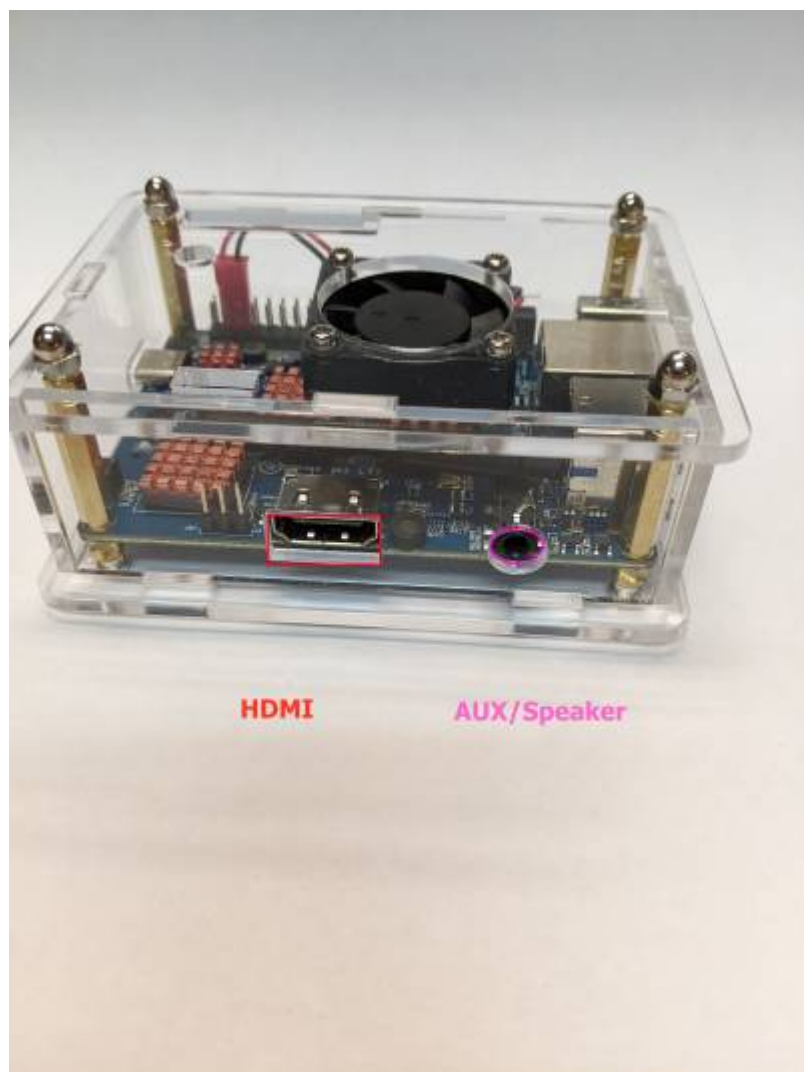3. USB Cable

PIPOS

Power Supply
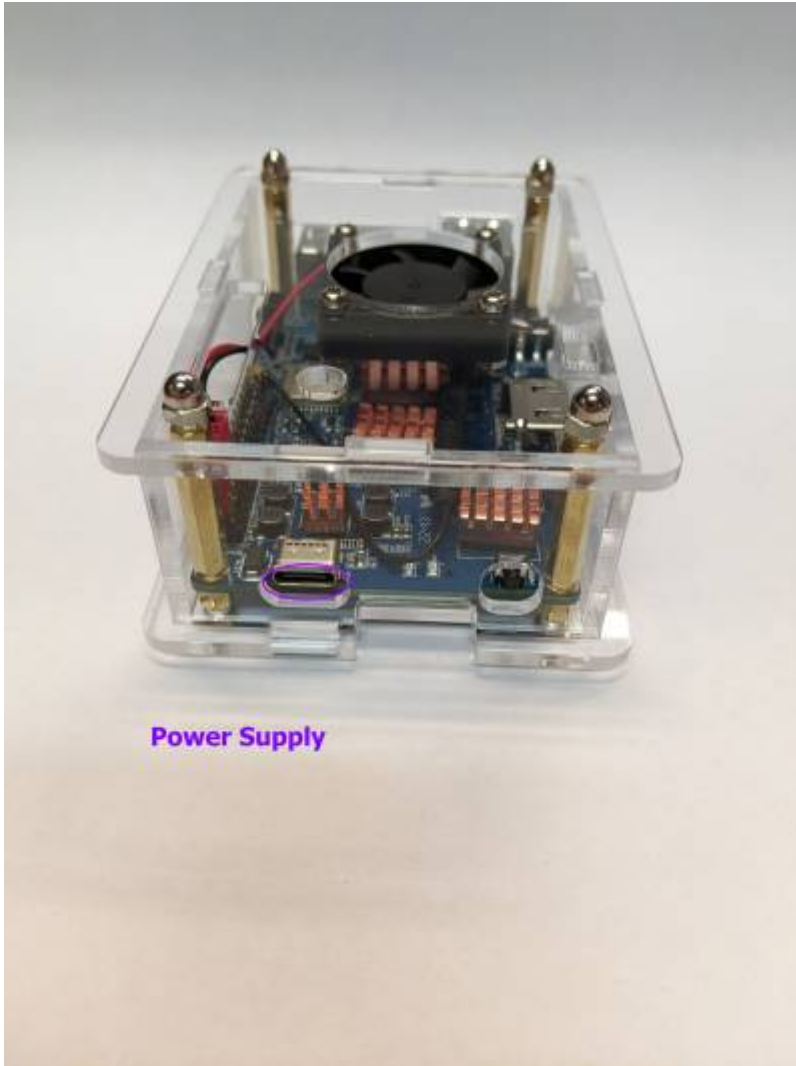
Ethernet Cable

HDMI Cable

PIPOS Ports

USB   Ethernet

HDMI   AUX/Speaker

Power Supply

Diagram of how to connect your PIPOS Unit

Monitor

POWER   USB   HDMI

wall outlet

Only use USB if you have a TouchScreen
Speakers can be plugged into "Audio out"

Do not plug anything else into Monitor
without calling Imagatec.

wall outlet

SPEAKER   HDMI   POWER

ETHERNET

4 USB PORTS

PiPOS Box

Speaker port is optional

Other things you can plug into USB Ports:
Mouse
Keyboard
Till if directed by Imagatec
4G dongle if directed by Imagatec

Modem/Switch

Your PiPOS MLM will communicate with the
rest of your devices through the
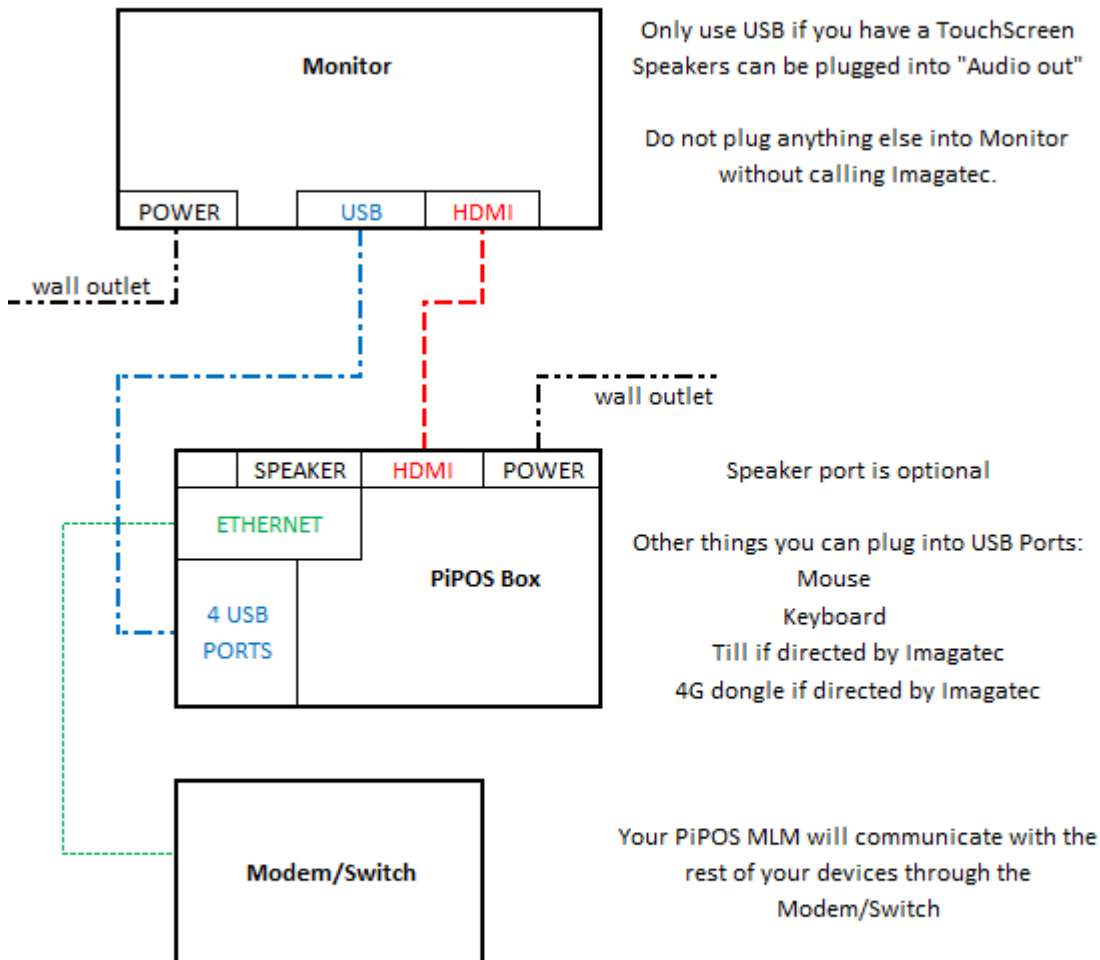Modem/Switch

The modem/switch is where all your network devices plug into, such as Computers and Printers

If you are unsure please call Imagatec on 1300 365 443 for guidance

pipos_mlm_diagram.xlsx